

PLUG WIRING (UK & IRELAND)

This appliance must only be used with the battery transformer supplied with it. You cannot use the Carpet Sweeper with another battery transformer...and you cannot use the battery transformer with another sweeper.

If in doubt, contact a qualified electrician.

*We reserve the right to amend specification as part of our policy of continual product improvements.
All sizes, weights, dimensions, temperatures, times, consumption figures are approximate only.*



The 'crossed-out wheeled bin' symbol indicates that this product can be recycled. Do not dispose of with the household waste. To protect the environment take it to your local council's collection site. The battery inside is not designed to be replaced.

WARRANTY

Your new product has a warranty of 12 months from the date of consumer purchase. Please keep your receipt as it will be required as proof of date of purchase. This warranty only applies if the item has been used solely for household use in the UK or Ireland, and all instructions have been followed properly. Abuse of your appliance will invalidate the warranty. Returned goods cannot be accepted unless repacked properly within the original packaging, and presented with the original receipt. This does not affect your statutory rights.

In the event of service query, please contact us on 0121 693 9221 or 0044 121 693 9221 if outside the UK, where we will be pleased to help; or via e-mail on vc3@efbeschott.com

efbe-Schott®

Carpet Sweeper
rechargeable

VC 3
4.8V – 6W max



IMPORTANT SAFEGUARDS


- Read all instructions before use.
- Do not touch hot surfaces; use handles or knobs.
- To protect against electric shock, do not immerse cord, plug or appliance in water or any other liquid.
- Close supervision is necessary when appliance is used near children.
- Make sure the power cord from the plug socket to the Carpet Sweeper body is not stretched or otherwise tight or taught.
- Do not let cord hang over edge of table or counter, or touch hot surfaces or come into contact with naked heat source.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries and invalidate any warranty you may have.
- Do not use outdoors, or on or near direct heat sources
- Do not allow the Carpet Sweeper to become too full of dust.
- Do not use this appliance for any use other than the intended use. This appliance is for household use only.
- This appliance is an attended appliance, and as such should never be left without adult supervision.
- The Carpet Sweeper is designed for dust cleaning only.
- ALWAYS empty the dust from the Carpet Sweeper's dust container before it gets too full
- NEVER use the Carpet Sweeper to clean up hot ashes or other hot debris.
- ALWAYS ensure the Carpet Sweeper is unplugged before attempting any maintenance tasks.
- ALWAYS unplug or switch off at the power source after charging. Leaving the sweeper permanently plugged in and charging will quickly and terminally damage the battery, and is not covered by any warranty you may have.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

KNOW YOUR NEW CARPET SWEEPER

Remove all packaging from the Carpet Sweeper, and check that you have all the components, either loose or partially assembled. If anything is missing, call our Helpline on 0121 693 9221

KNOW YOUR NEW CARPET SWEEPER

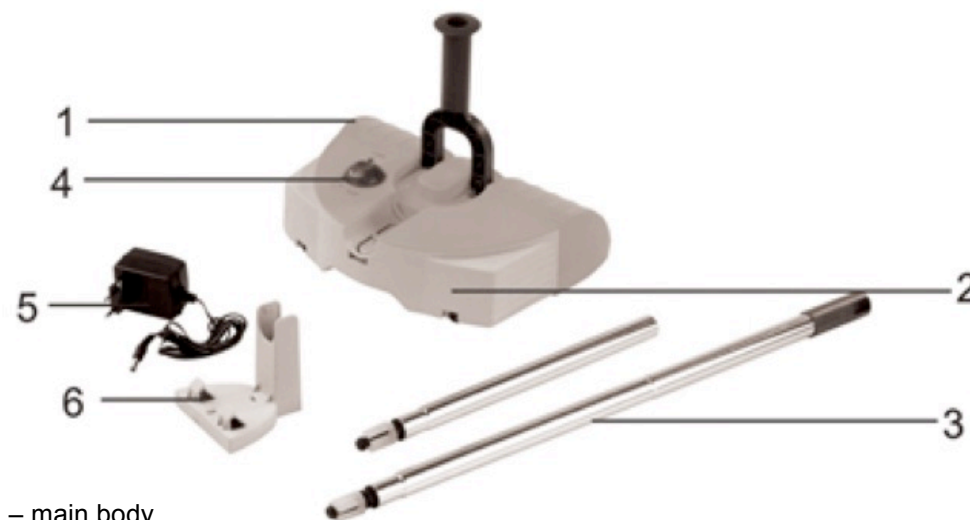

- 1 – main body
- 2 – dust container
- 3 – telescopic tubes (note: some models may have three tubes)
- 4 – ON/OFF foot switch
- 5 – Battery charger
- 6 – Hang-up hook accessory

FIRST THINGS FIRST

Your new Carpet Sweeper will come with a little charge, however it won't be fully effective. There is no need at this stage to assemble the telescopic tubes. Simply plug in the battery transformer (ensure your hands are dry) and connect into the main body. ENSURE THE ON/OFF SWITCH IS IN THE OFF POSITION..OTHERWISE IT WILL NOT CHARGE.



A full charge can take up to 12 hours.

UNPLUG or POWER OFF at the plug afterwards; do NOT leave permanently plugged in.

ASSEMBLING YOUR NEW CARPET SWEEPER

One of the tubes has a handle – this is the uppermost tube and the one you hold. The other two tubes screw into each other, the threaded portion fixing in to the unthreaded portion of each other tube; follow this procedure:

The threaded portion of the tube has a turning collar. **Loosen that collar but do not detach it.** Now insert the tube (**with that loose collar**) into the unthreaded hole part of the next tube. Now gripping both tubes, turn the tube with the threaded part (and loose collar) clockwise against the other tube to secure them together.

The tubes will only tightly lock together if that collar is loosened first.



Loosen this collar before assembly. Do NOT detach it.

This design ensures that it's easy to disassemble the tubes should you wish to, as it's the fixing of that collar against the inner wall of the mating tubes (by the screwing action) that secures the tubes together.

The threaded portion of the lower tube fits into the handle yoke on the main body – follow the above procedure.

Depending on your height and preference, you can use one or two or three (if supplied) tubes.

USING YOUR NEW CARPET SWEEPER

Once charged, disconnect from the power supply, assemble the tubes and you can start to clean – use the floor mounted switch for ON/OFF. A full charge should provide around 25-minutes of continuous use, though you can use it for longer if the battery supports it.

If it runs out in use, REMEMBER TO USE THE FOOT MOUNTED SWITCH AND TURN IT OFF. THE SWEEPER WILL NOT RECHARGE WITH THIS SWITCH IN THE ON POSITION.

LOOKING AFTER YOUR NEW CARPET SWEEPER

DO NOT OVERCHARGE and DO NOT KEEP IT PLUGGED IN AND CHARGING FOR MORE THAN 12-HOURS.

EMPTYING YOUR NEW CARPET SWEEPER

If suction power decreases or simply you know the dust container is becoming full, you can easily empty it.

Switch OFF using the foot mounted switch; then with one hand steady the body and your other hand grip and depress the slider, thus unlocking the dust canister. It can then be disengaged and easily emptied. Re-assembly is a reversal of this process, ensure it's on straight and clicks shut.



HELP! I THINK MY NEW CARPET SWEEPER HAS GONE WRONG.

I SWITCH IT ON BUT NOTHING HAPPENS Did you charge it? If the ON/OFF button was in the ON position, then it will not have charged.

I CAN'T TIGHTEN TUBES You MUST ensure the collar on the threaded part of the tube is loose before fixing to the other tube.

I USED IT AND NOW IT'S GOT NO SUCTION POWER It is possible that the dust container is full, so regularly check and detangle where necessary.

CAN I USE THE CHARGER FOR OTHER APPLIANCES..and vice-versa? No, these two items are matched to each other.

WHERE CAN I GET HELP? Please call us on 0121 693 9221 (1000-1600 hrs, Monday-Friday) or email us at vc3@efbeschott.com